

F0 26 7B 52 00 Value(00-7F) F7	Mirco Left Volume
F0 26 7B 53 00 Value(00-7F) F7	Mirco Right Pan
F0 26 7B 54 00 Value(00-7F) F7	Mirco Left Pan
F0 26 7B 55 00 Value(00-7F) F7	Mirco Righth Echo
F0 26 7B 56 00 Value(00-7F) F7	Mirco Left Echo
F0 26 7B 57 00 Value(00-7F) F7	Mirco Right Reverb
F0 26 7B 04 01 Value(34-40-4C) F7	Mirco EQ Low
F0 26 7B 05 01 Value(34-40-4C) F7	Mirco EQ Mid
F0 26 7B 06 01 Value(34-40-4C) F7	Mirco EQ Hi
F0 26 7B 58 00 Value(00-7F) F7	Mirco Left Reverb
F0 26 7B 0E 00 00 F7	GLOBAL GM RESET
F0 26 7B 0F 00 Part SetPart F7	SET PART, Drum o Voice  Part 0..16 SetPart  0 - Voice 1 - Drum 2 - Drum2
F0 26 7B 78 00 Value(34-40-4C) F7	DSP Main LOW
F0 26 7B 7A 00 Value(34-40-4C) F7	DSP Main HI
F0 26 7B 03 00 Key F7	Split Keyboard Key [ 01 - 7F]
F0 26 7B 07 00 Transpose F7	Keyboard Transposer Range = [28H .. 58H] 40H = No Transposer
F0 26 7B 1B 00 Curve F7	Velocity curve Range = [0..5]
F0 26 7B 00 01 (Path+Name) 0x00 F7	Wave Start
F0 26 7B 01 01 Value(0x00..0x7F) F7	Wave Volume Ch1 (Slider Wave)
F0 26 7B 02 01 Value(0x00..0x7F) F7	Wave Volume Ch2 (Slider DjLoop)
F0 26 7B 03 01 Value(0x00= OFF,0x7F=ON) F7	Wave Lead Mute On/Off